


SERVICE MODE ADJUSTMENTS


1.0. WHITE BALANCE ADJUSTMENT

1.1. Switch on TV over mains switch while pressing up/down buttons on control unit.

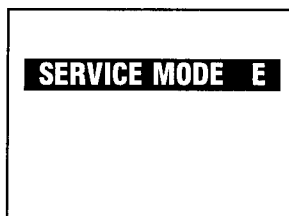

Appears on screen.


1.2. Push colour button on R/C hand set

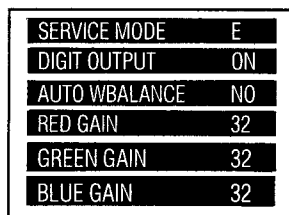

Appears on screen.

If auto WBalance is yes push up button.

1.3. Push colour button on remote control hand set repeatedly.

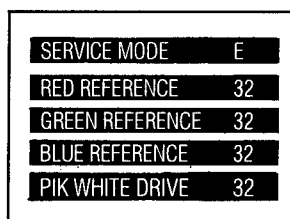

Appears on screen.

Digit output Yes

Adjust $\left[\begin{array}{l} \text{Red reference} \\ \text{Green reference} \\ \text{Blue reference} \end{array} \right]$ to levels given in below table

Digit output No

Digit output Yes


$\left. \begin{array}{l} \text{Red gain} \\ \text{Green gain} \\ \text{Blue gain} \end{array} \right\}$ Adjust to values 20 higher than the present ones to increase contrast when needed.

The value of flashing line can be changed by up or down button.

Switch off and on tv over main switch to
Leave service mode.

2.0. Selection of external connections


2.1. Switch on TV Over main switch while pressing up and down buttons on R/C control unit.

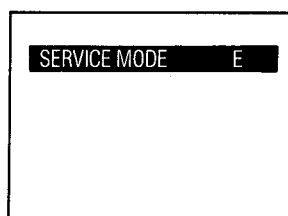

Appears on screen.

	SAMSUNG	PHILIPS	NOKIA	VIDEO COLOR	
14 "		34			RED REF
		32			GREEN REF
		23			BLUE REF
		32			PEAK WHITE DRIVE
15 "		34			RED REF
		32			GREEN REF
		23			BLUE REF
		32			PEAK WHITE DRIVE
20 "	23				RED REF
	27				GREEN REF
	20				BLUE REF
	32				PEAK WHITE DRIVE
21 "			25	41	RED REF
			28	23	GREEN REF
			24	20	BLUE REF
			32	32	PEAK WHITE DRIVE
25 "			25	41	RED REF
			23	23	GREEN REF
			22	20	BLUE REF
			32	32	PEAK WHITE DRIVE
28 "			25	41	RED REF
			25	23	GREEN REF
			22	20	BLUE REF
			32	32	PEAK WHITE DRIVE

2.2 Push AV button on R/C hand set

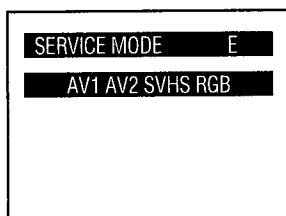


Appears on screen.

By pressing O.K. Button flashing character will turn from white to purple

By pressing (+) or (-) buttons flashing position changes
FOR MONO T.V. AV1 indicates 1. scart

3.0. SYSTEM SELECTION

3.1. Push a/b button on r/c hand set

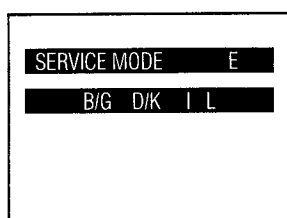


Appears on screen.

3.2. By pressing O.K. Button flashing character will turn from white to purple.

3.3. By pressing (+) or (-) buttons flashing position changes. White characters indicate receivable system.

4.0. CHANNEL COVERAGE SELECTION


4.1. PUSH PS BUTTON ON R/C HAND SET

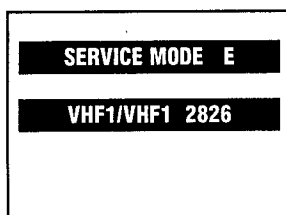

Appears on screen. check!

If not, to reach 2826 push up or down button. Mute button changes 3. digit of this number.


4.2. PUSH PS BUTTON ON R/C HAND SET

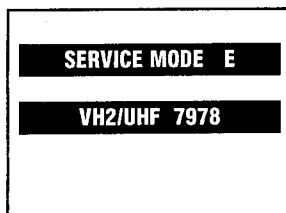

Appears on screen. Check!

If not, to reach 7978 push up or down button. Mute button changes 3. Digit of this number

4.3. PUSH SERVICE SWITCH ON R/C HAND SET

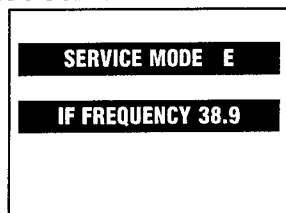

Appears on screen. Check!

If not, change this value with up or down buttons.

RTV servis Horvat

Kešinci, 31402 Semeljci


Tel : 031-856-637

Tel / fax : 031-856-139

mob : 098-788-319

ervis-horvat@os.tel.hr

4.4. PUSH SERVICE SWITCH ON R/C HAND SET

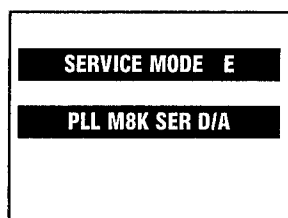

Appears on screen.

Press O.K. Button and convert colour of flashing characters from purple to white. Repeat this procedure for all characters on this menu.

M8K WHITE 100Programme

M8K PURPLE 50Programme

5.0. PREPARING A SERVICE R/C HAND SET


5.1. MOUNT A MICRO SWITCH ON R/C HAND SET

5.2. CONNECT PIN 10 AND 19 OF R/C IC KS 51800 BY A MICRO SWITCH.

When micro switch pushed these pins are short.

6.0. SETTINGS OF TELETEXT

6.1. PUSH T.V.-T.T. BUTTON ON R/C HAND SET

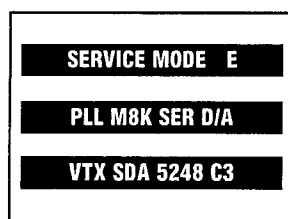

Appears on screen.


The digit behind C determines teletext decoding languages.
Change this digit by pushing up or down buttons.

C1. English, German, Swedish, Italian, French, Spanish.

C2. English, German, Scandinavian, German, Serbocroat, Czech-slovak, Romanian.

C3. English, German, Swedish, Italian, French, Spanish, Turkish.

6.2. PUSH T.V.-T.T BUTTON

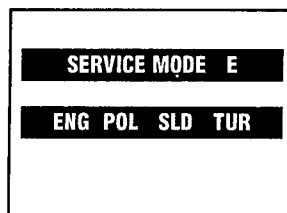

Appears on screen.

From this menu teletext message language can be choosen. Pressing O.K. Button changes colour and pressing up or down button changes position of flashing characters. White language indication shows teletext message language.