

SERVISNI MENU ZA TV 55V10/37V10
shassis: 3Y/4Y01

MENU 1

V. SIZE 20
V. POS 33
V. LINE 10
V. SC 0
H. PHASE 13
H. BLK 0
PATTERN 0
H. FREQ 25

MENU 4

SUB_BRI 123
OSD CONT 100
B. GAM SEL 0
RG GAM DEF 0
SCM B_Y DC 8
SCM R_Y DC 4
BLUE BLACK 1
C/E OSD 0

MENU 3

RF. AGC 15
VIF. SYS 1
SND. TRAP 7
VIDEO LEVEL 0 (4)
FM LEVEL 0
R. B. BALANCE 8
DIGITAL OSD 0

OPTION

2 AV CH 0
C. SYS. SEL 1
TXT ON 1
MONITOR OUT 0
LOGO ON 1 (0)
CUSTOM LOGO 1 (0)
N P00 VLT 1
TUNER TYPE 0

MENU 2

V. KILL 0
R. C. 128
G. C. 180
B. C. 125
R. D. 48
G. D. 10
B. D. 63
COLLOR TEST 0

Ulaz u servisni menu:

1. Stisnuti MENU dva puta
2. Stisnuti Q.VIEW
3. Stisnuti MUTE
4. Menu-i se mjenjeju sa tipkom TIMER (sat na daljinskom)