


12.6

TUNING and MEMORY

You can tune the TV either automatically or manually.

a. Automatic tuning and memory :

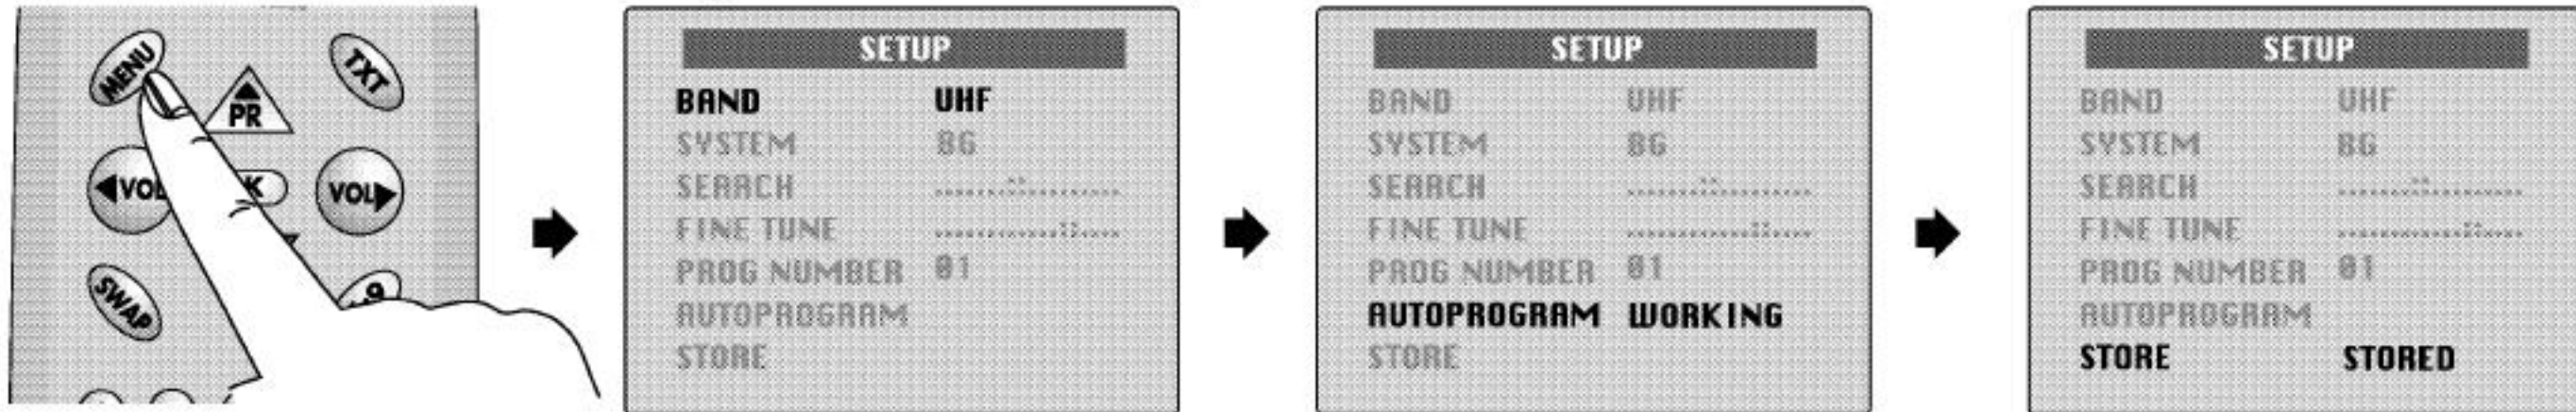

- Press the **"MENU"** button twice, **SETUP** menu will appear on the screen.
- Select the **AUTOPROGRAM** by pressing **PR▼** button.
- Press the **"OK"** button. Your TV will start to search for and store programmes. Meanwhile **AUTOPROGRAM WORKING** sign will flash on and off on the **AUTOPROGRAM** row.
- You can follow the tuning progress on the band and search row.
- After this process has been completed, **SETUP** menu will disappear and the first stored programme will appear on the screen.

To optimise reception fine tuning may be required. If so, please refer to the **MANUAL FINE TUNE** section.

NOTE: To exit this mode press the **"MENU"** button on the remote control.

b. Manual tuning and memory:

- Press the **"MENU"** button twice, **SETUP** menu will appear on the screen.
- Select the band (VHF1, VHF111, UHF) by pressing **◀VOL** or **VOL▶** button.
- Select the **"SEARCH"** row by pressing **PR▼** button.
- Start the searching function by pressing **VOL▶** or **◀VOL** button.

The searching will stop when a programme has been found.

If the quality of the display or the channel is not the one required continue to search by pressing **VOL▶** button.

- If you want to store this programme, select the **PROG NUMBER** row by pressing **PR▼** button.
- Enter the desired programme number by using the **TEN** key programme buttons or ;
- You can select the programme number by using the **VOL▶** or **◀VOL** buttons.
- Select **STORE** using the **PR▼** button.
- Press **OK** to store. **"STORED"** will appear on the screen.
- The channel will be stored with the programme number you desired.
- Repeat the above steps until all programmes are stored.

To optimise reception fine tuning may be required. If so, please refer to the **MANUAL FINE TUNE** section.

NOTE: To exit this mode press the **"MENU"** button on the remote control.