

CROWN Telra Chassis


General Information

Covers Models:
Crown CRT 9551 RT
Crown CRT 9521 R
Crown CRT 5912 RT
Crown CRT 5159 R
CRT's 20" & 21"

Tube No.	C625 <1.6Kv>	R644	R645	Tube Socket	Lin Coil
A51-230X Nokia	9.1nF	1K8#	1K8*	Narrow Neck	57uH
A48KCS12XX Goldstar	8.2 nF	1K8#	1K8*	Narrow Neck	57uH
A48JRV90X01 Orion	10 nF	1K8#	1K8	Narrow Neck	57uH
A48KCS12XX01 Goldstar	8.2 nF	1K8#	1K8	Narrow Neck	57uH
A51JSY61X03 Hitachi	9.1 nF	1K8#	1K8*	Narrow Neck	57uH
51GG95X-TC Samsung	9.1 nF	1K8#	1K8*	Narrow Neck	57uH
A48JRV50X64 Orion	8.2 nF	1K8#	1K5	Narrow Neck	57uH

Cut the lead of resistor marked with # in order to shift picture up.
 Cut the lead of resistor marked with * I order to shift picture down.


Main Diagram

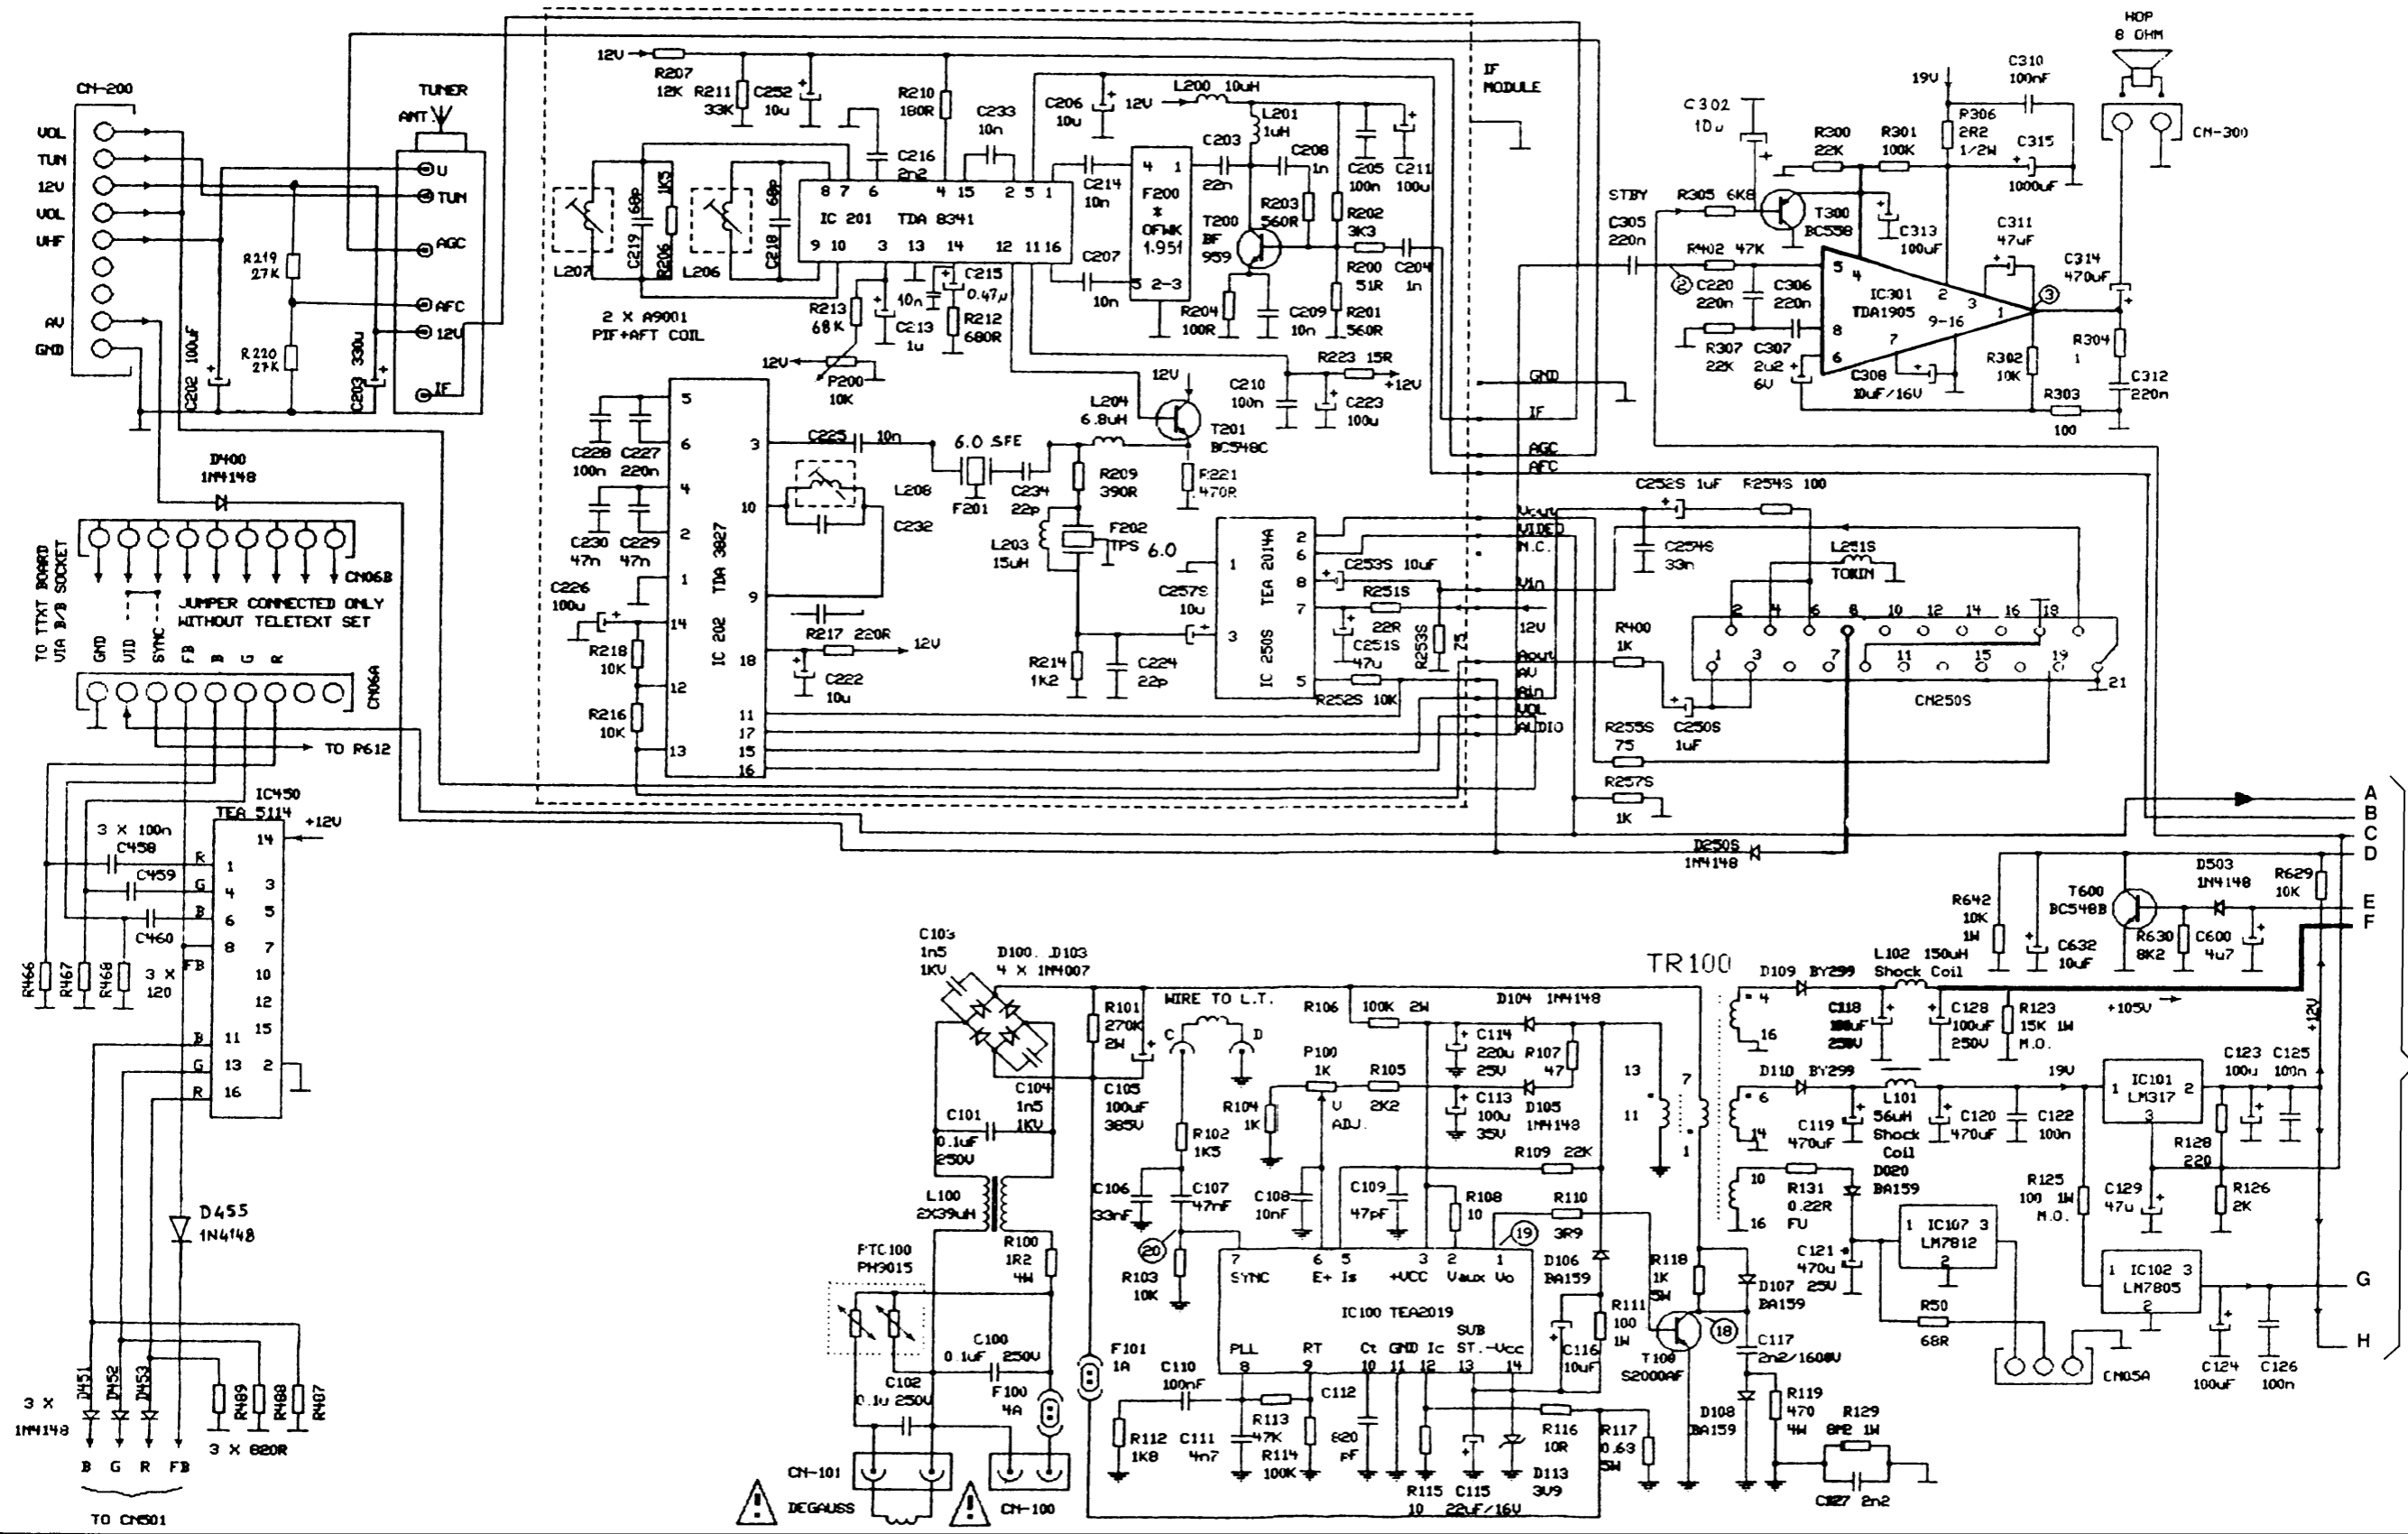

Continued at 1


CROWN Telra Chassis

Main Diagram Cont'd.

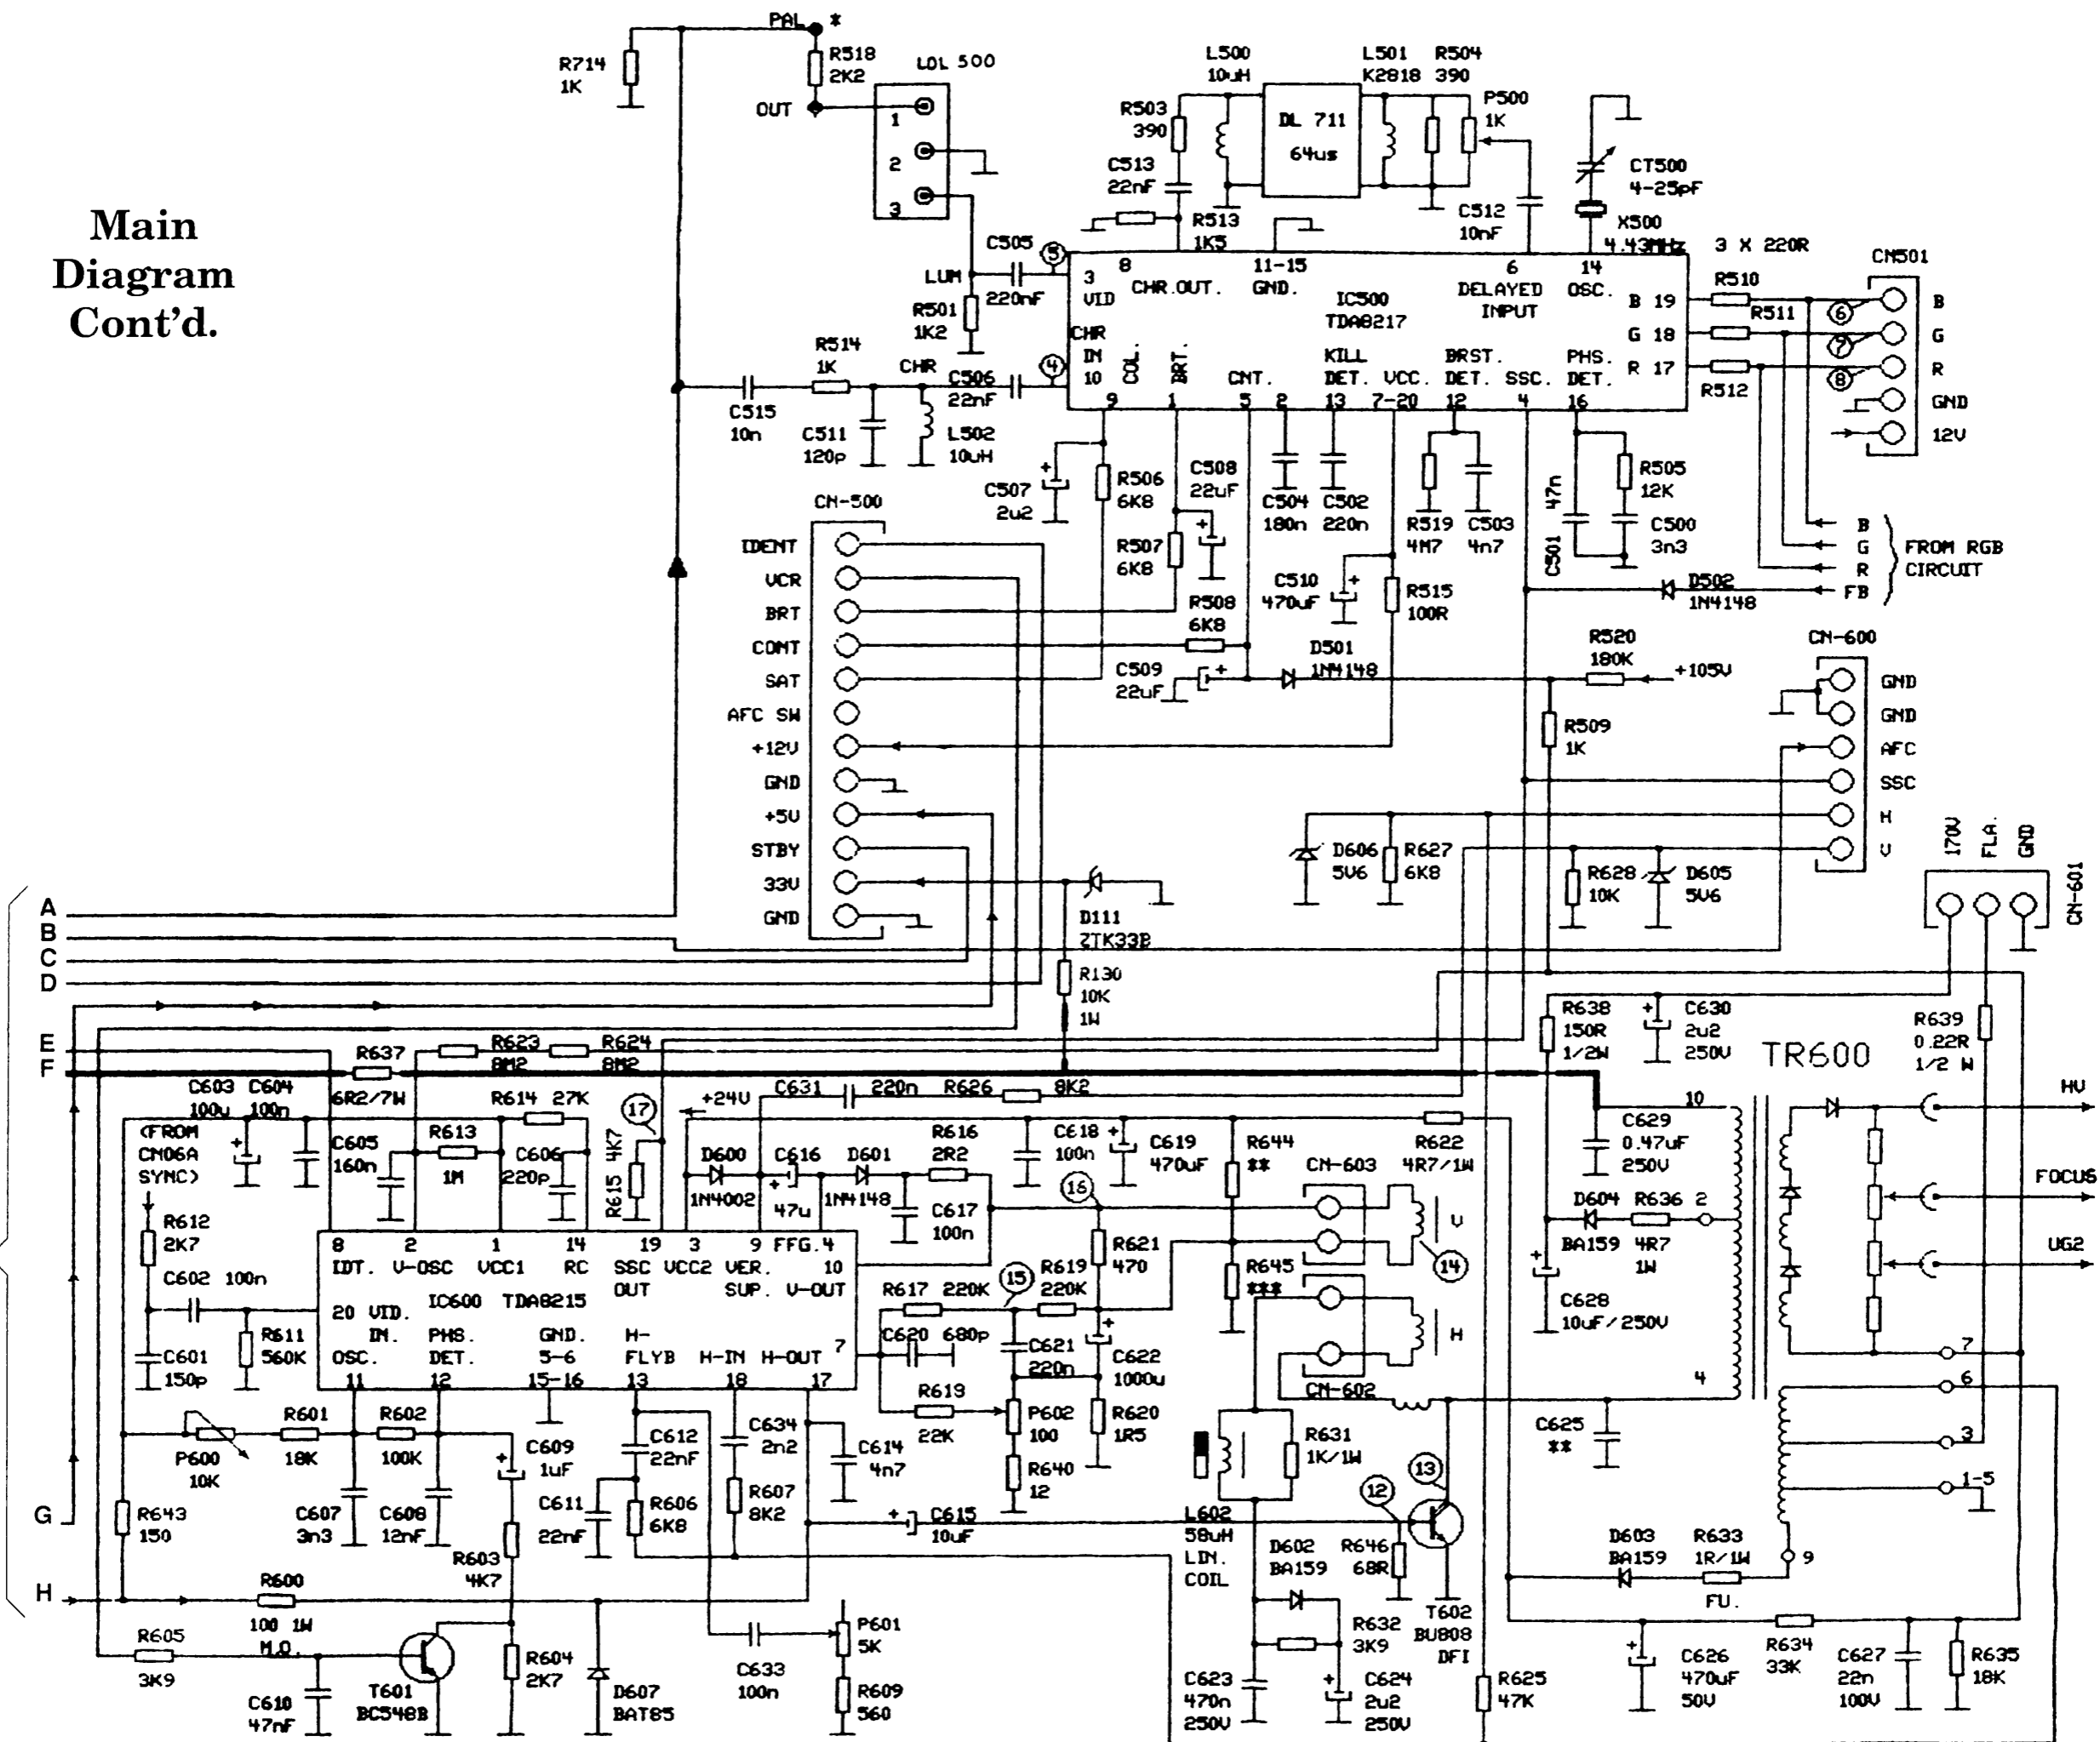


CROWN Telra Chassis

Remote Control -Transmitter

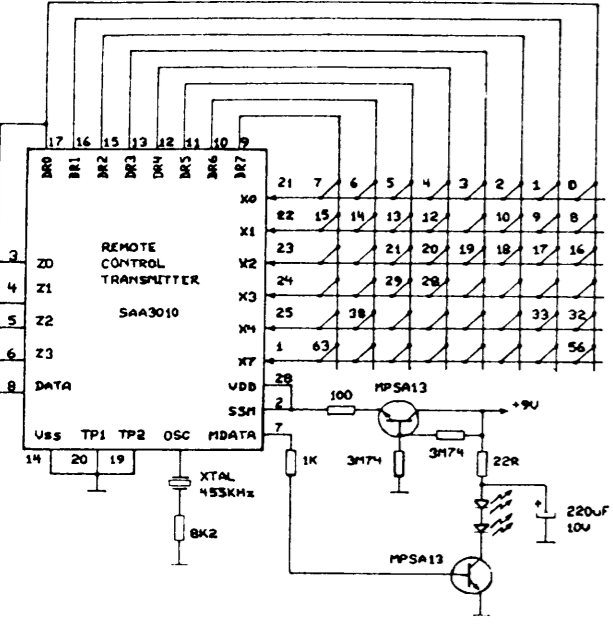


Remote Control -Keyboard


CODE	TV MODE
1	0
2	1
3	2
4	3
5	4
6	5
7	6
8	7
9	8
10	9
12	STANDBY MODE
13	MUTE ON/OFF
14	PERSONAL
15	PREFERENCE
16	TV STATUS
17	VOLUME UP
18	VOLUME DOWN
19	BRIGHTNESS UP
20	BRIGHTNESS DOWN
21	COLOUR UP
22	COLOUR DOWN
28	CONTRAST UP
29	CONTRAST DOWN
32	PROG UP
33	PROG DOWN
38	SLEEP TIMER
56	AV
63	TV

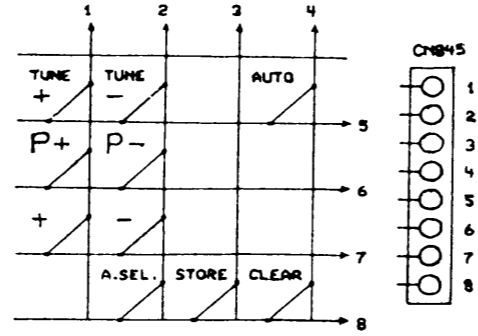


Remote Control -Pre Amp

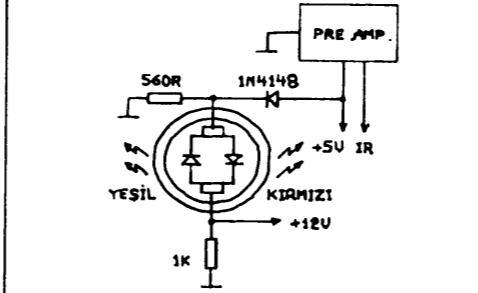

Teletext Diagram

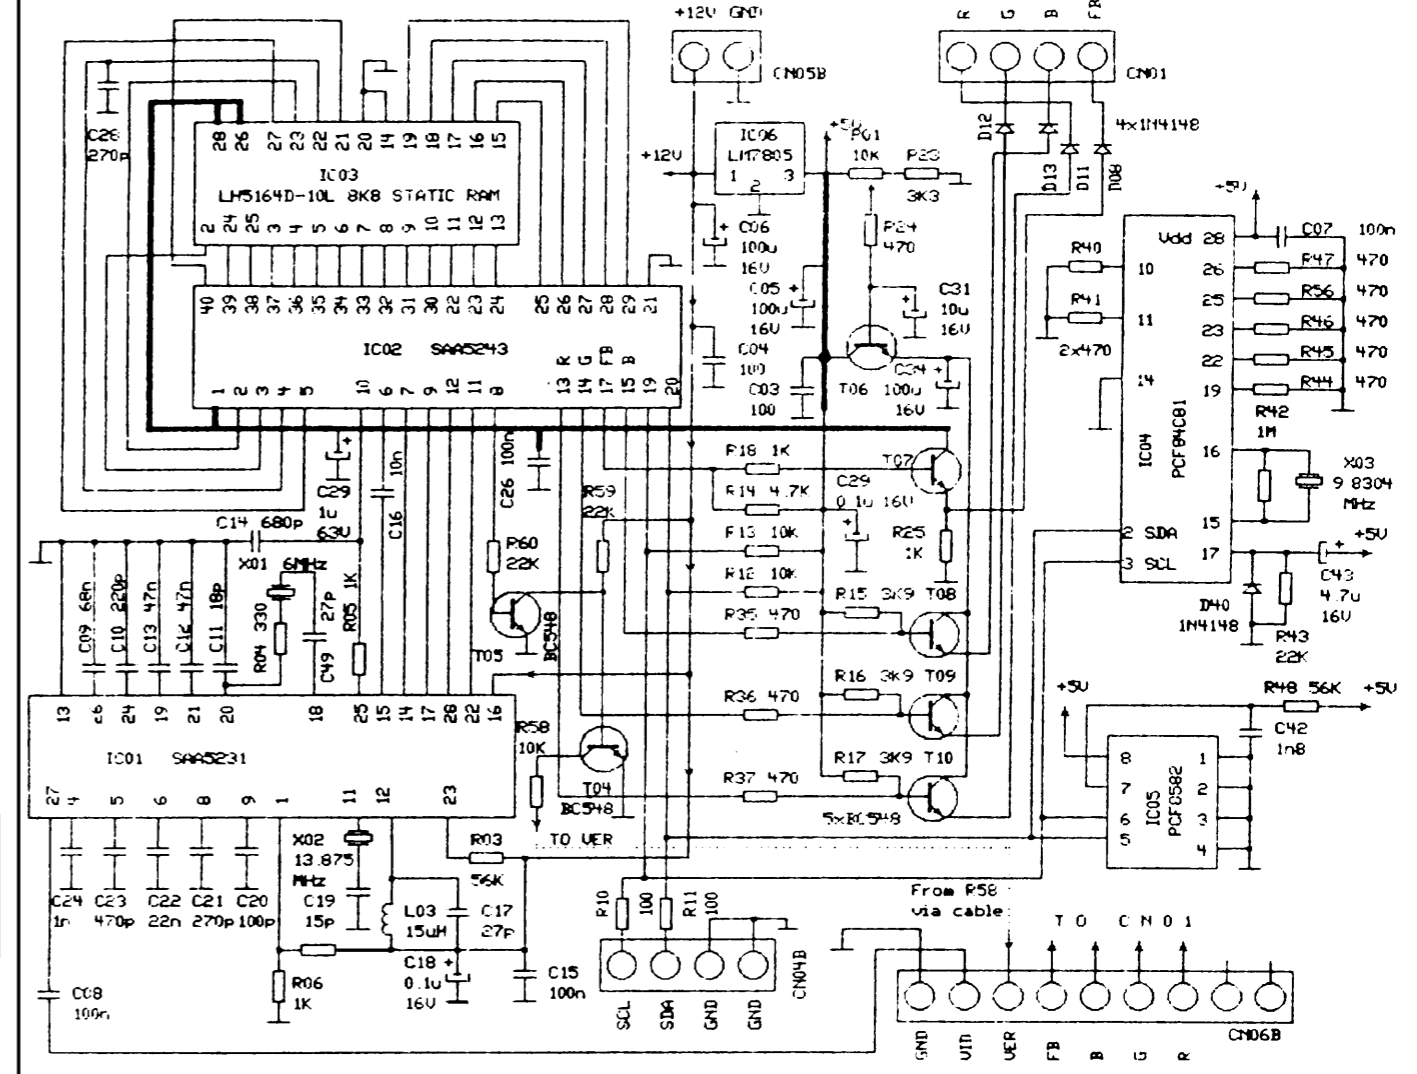

Remote Control Diagram

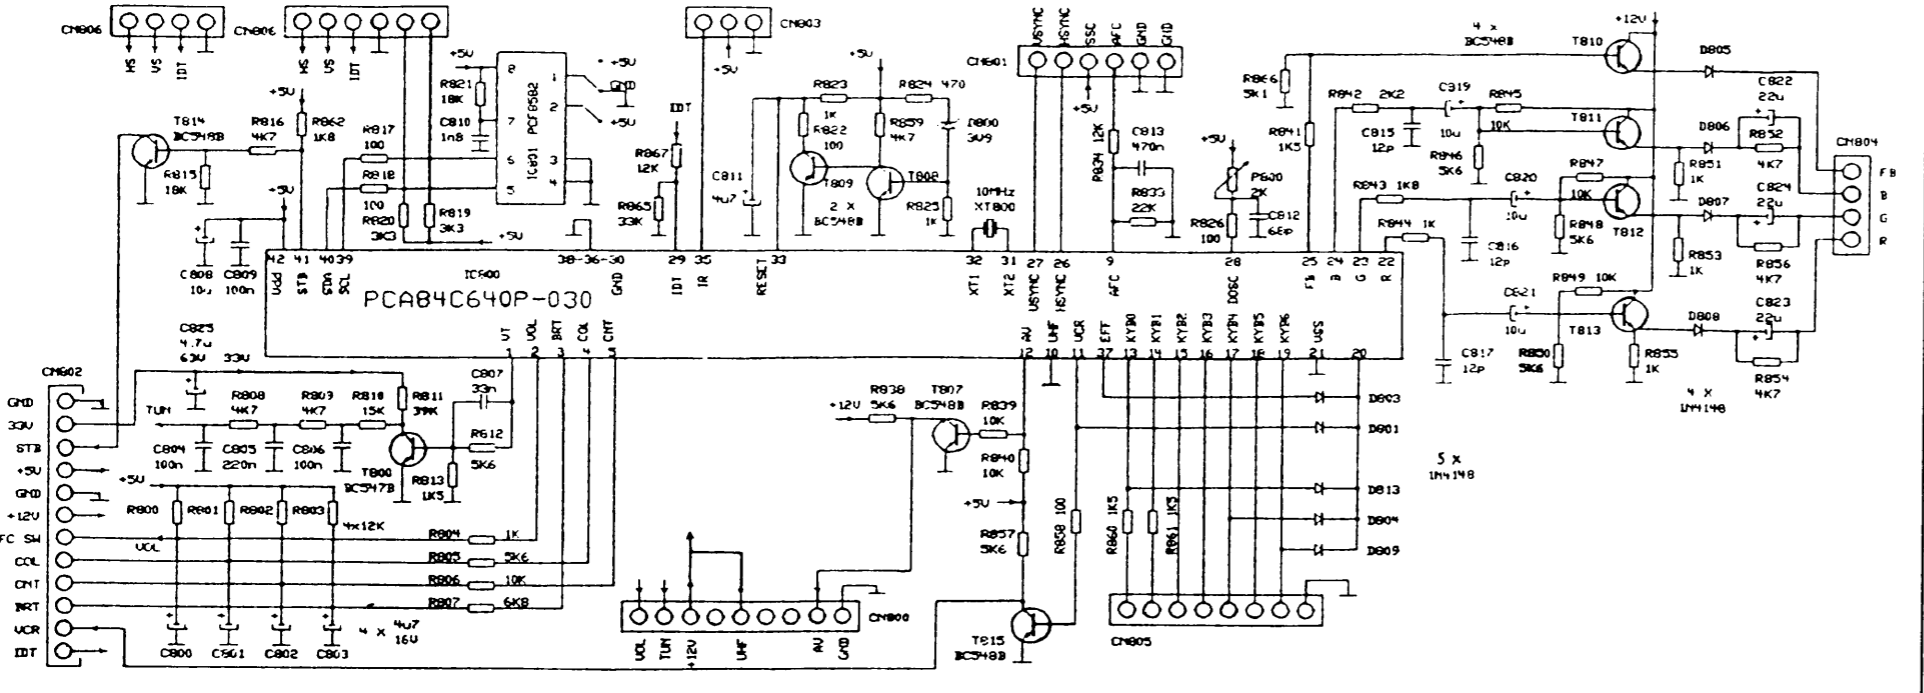

CRT Diagram

