

## JP (Jumper) Setting

### [Indoor Unit]

AWYZ14/18LBC

#### - Remote control custom code

When multiple number of indoor units are installed in the same room, erroneous receipt of the signal can be avoided by setting up the remote control custom code separately.

To set up the remote control custom code, always set up the same code on both indoor unit PCB and remote control PCB.

(When the indoor unit PCB is changed to Code B, it can not receive the signal unless remote control PCB is also changed to Code B.)

	Indoor Unit	Remote Control
	JM2(JP)	J1
Code A (Default)	○	○
Code B	×	×

#### - Auto Restart

It is possible to disengage Auto Restart function if it is not needed.

	Indoor Unit
	JM1 (JP)
With Auto Restart function (Default)	○
Without Auto Restart function	×

### [Outdoor Unit]

AOYZ14/18LBC

		JP			
		JM1	JM903	JM092	JM901
14LBC	Normal Preheat	○	×	○	×
	Higher Preheat	×	×	○	×
18LBC	Normal Preheat	○	×	×	×
	Higher Preheat	×	×	×	×

- it is possible to select the higher or standard level of preheating function.

- When it is set up at the higher level of preheat, the magnetic noise of the compressor becomes higher.