

Telephone:
Fax:
VAT Registration No.:

Fuel pressure

Checking - Fig. 1

Technical Data		
Pressure	Condition	Value
System	Vacuum OFF	4 bar
Regulated	Vacuum ON	3,5 bar
Holding	After 10 minutes	2,5 bar min.

- Ensure ignition switched OFF.
- Connect pressure gauge between fuel supply pipe and fuel rail.
- Start engine. Allow to idle.
- Disconnect vacuum hose from fuel pressure regulator.
- Compare system pressure indicated with that specified.
- Reconnect vacuum hose.
- Compare regulated pressure indicated with that specified.
- Switch ignition OFF.
- After 10 minutes check holding pressure.

