

Telephone:
Fax:
VAT Registration No.:

Fuel delivery rate

Checking - [Fig. 2](#) & [Fig. 3](#)

Technical Data	
Supply voltage	Delivery rate
11-13 V	0,45-0,63 litre/15 sec. min.

- Ensure ignition switched OFF.
- Disconnect fuel return pipe from fuel pressure regulator.
- Connect test pipe to fuel pressure regulator.
- Insert end of pipe into measuring flask [Fig. 2](#).
- Remove fuel pump relay.
- Bridge fuel pump relay base terminals 30 and 32 with a switched lead [Fig. 3](#).
- Operate switch to run fuel pump.

