

Location

- For maximum distance and noise-free operation, place your base unit:
 - away from electrical appliances such as TVs, radios, personal computers, or other phones.
 - in a convenient, high, and central location.

Battery installation

Important:

- Use only the supplied rechargeable batteries noted on page 4, 5.
- USE ONLY rechargeable Ni-MH batteries AAA (R03) size.
- Do NOT use Alkaline/Manganese/Ni-Cd batteries.
- Ensure correct polarities (+, -) when installing the batteries.
- Wipe the battery ends (+, -) with a dry cloth.
- When installing the batteries, avoid touching the battery ends (+, -) or the unit contacts.

Battery charge

Place the handset on the charger for about 7 hours before initial use.







Note:




- The handset display may show "Please Wait..." when the handset is placed on the charger if it is not registered to a base unit.
- If you fully charged the batteries, but the operating time seems to be short, wipe the battery ends (+, -) and the unit contacts with a dry cloth.

Registering the handset to the KX-TG7200/KX-TG7220 base unit

Ensure that the handset is switched on. If it is not on, press and hold [**Ⓜ**] for few seconds to turn the handset on.

- 1 Lift the handset and press [**Ⓜ**]. Place the handset on the base unit.
 - Continue the operation even when the handset display shows "Please Wait..."
- 2 Proceed with the operation for your model.
 - **KX-TG7200**
Press and hold [**Ⓜ**] on the base unit for about 5 seconds. (No registration tone)
 - **KX-TG7220**
Press and hold [**Ⓜ**] on the base unit for about 5 seconds, until the registration tone sounds.
- 3 With the handset still on the base unit, wait until a confirmation tone sounds and **Ⓜ** stops flashing.

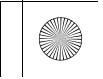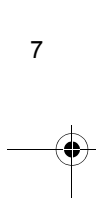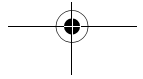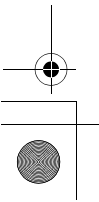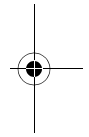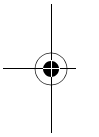

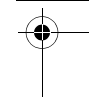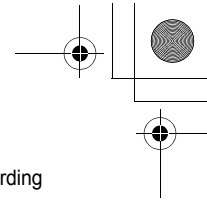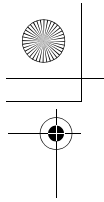

Note:

- If an error tone sounds, or if Ψ is still flashing, register the handset according to the base unit's operating instructions.
- If all registered handsets start ringing in step 2, press **[*0]** to stop. Start again from step 1.
- The KX-TG7200 does not feature an answering system.
- Answering system features are available only when this handset is registered to the KX-TG7220.

